



TRACKOUT CONTROL MAT

FODS INSTALLATION ANCHORING ACCESSORIES

Anchoring Data Sheet


GENERAL INFORMATION

To ensure proper performance and safety, FODS Track out system must be anchored in place. Proper anchoring procedure will vary depending on use and substrate condition. Form stakes can be used in most substrates. To anchor mats to asphalt or concrete, a concrete sleeved anchor should be used. Anchoring systems are sold separately.

For more information on how to use the anchors please see our installation guide or contact FODS at 844-200-3637.

- Concrete Sleeve Anchor

- Form Stake

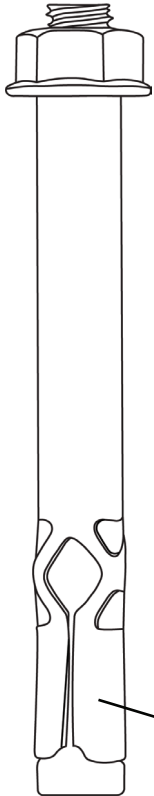

**3/4" X
6-1/4"
HLC HEX
NUT SLEEVE
ANCHOR**



**AS NUT IS TIGHTENED,
SLEEVE EXPANDS IN
SUBSTRATE**

**18 IN. X 3/4 IN.
NAIL STAKES
WITH HOLES**

